

TECHNICAL SPECIFICATION



Force®10 Typhoon™ Full Face Respirator

Small (F10-1010) / BPB003-104-000-UK



DESCRIPTION

Force®10 Typhoon™ is an extremely lightweight, easy to maintain full face mask with panoramic visor. With 3 available sizes (S,M,L) and the ability to fit PressToCheck™ filters, the user can feel reassured of an excellent fit.

OPTIONS

Large (F10-1030) (BPB003-204-000-UK)
Medium (F10-1020) (BPB003-004-000-UK)
Small (F10-1010) (BPB003-104-000-UK)

SAFETY STANDARDS

EN 136



JSP Limited, Worsham Mill, Minster Lovell, Oxford OX29 0TA, England.

Tel: +44 (0)1993 826050 / Fax: +44 (0)1993 824411 / Email: sales@jsp-safety.com / Web: www.jsp-safety.com

Do Not Publish without written permission from JSP Limited. Contact copyright@jsp-safety.com. Information correct in the United Kingdom at date of issue and may be subject to change. Any third-party machine and automated translations processed by users may have inaccuracies and should not be relied upon.

Page 1 of 3 / Issued 30 May 2024 / Copyright 2018 - 2024. JSP Limited. All Rights Reserved.



SPECIFICATIONS

Classification
Class 1

Usage
R



Exhalation Valve
Typhoon Valve

Mask Design
Over-Moulded Visor & Face Seal, Twin Filter with Orinasal



4 Point Harness adjustment system
Yes

RX Insert
Optional



BSI Kitemark
Yes

Mask Material
Thermoplastic Elastomer & Polycarbonate

Latex free
Yes

Metal Free
Yes



Product Weight
365g

FEATURES




Prescription RX Insert Lenses

The RX Modular Prescription Kit enables the use of corrective lenses with the Force@10 Typhoon™ respirator, preventing traditional prescription spectacles interrupting the face seal and compromising protection.



Effortless Maintenance

The Force@10 Typhoon™ has been meticulously engineered to incorporate a small number of key components. Disassembly, cleaning and maintenance are effortless with replacement parts available.

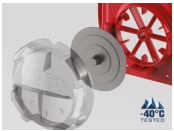

Typhoon™ Valve

Low resistance exhalation valve for easy breathing, with stable mask configuration. Made from silicone it performs well at very low temperatures.



Excellent Face Seal

Extensive research has been carried out by NIOSH (ISO16976-2) to distinguish the worlds 5 most common facial shapes. Using this research JSP have digitally optimised the ergonomics of the Force@10 Typhoon™ face seal to maximise wearer compatibility.



Available in 3 Sizes

Available in Small, Medium and Large to provide an even better fit to a wider range of face sizes and shapes improving the seal and level of protection. A size guide is available for use with Force@8 & Force@10 Typhoon™ masks.



Peel-off Visor

Replaceable peel-off visor protectors are available to prolong the life of the Force@10 Typhoon™.



PressToCheck™ Compatible

The Force@10 Typhoon™ is compatible with both JSP Classic filters and our PressToCheck™ filters, which allow for Daily Face Fit Reassurance™.



Ultra Lightweight Comfort

Comfort is a key feature of this ultra lightweight mask, the web like structure of the harness cradles the users head – ensuring wearer comfort throughout the working day.



Filter Compatibility

Fully compatible with PressToCheck™ twin filter cartridges, providing daily face fit reassurance with the easiest way to check the seal each time the mask is donned. Fit it - Press it - Check it.

APPLICATIONS

General guidance only and should not be considered a substitute for a full risk assessment



JSP Limited, Worsham Mill, Minster Lovell, Oxford OX29 0TA, England.

Tel: +44 (0)1993 826050 / Fax: +44 (0)1993 824411 / Email: sales@jsp-safety.com / Web: www.jsp-safety.com

Do Not Publish without written permission from JSP Limited. Contact copyright@jsp-safety.com. Information correct in the United Kingdom at date of issue and may be subject to change. Any third-party machine and automated translations processed by users may have inaccuracies and should not be relied upon.

Page 2 of 3 / Issued 30 May 2024 / Copyright 2018 - 2024. JSP Limited. All Rights Reserved.



Aerospace

Agricultural

Airports

Construction and Infrastructure

Facilities Management

Food and Drink Manufacturing

Hospitals, Healthcare & Pharmaceuticals

Law Enforcement

Manufacturing

Maritime

Mining, Aggregates and Quarrying

Oil, Gas and Chemical Companies

Rail and Tunnelling

Scaffolding and Roofing

Sole Trader

Utilities Contractors

Welding

RANGE

VIDEOS



youtu.be/QXur8s3R7DI

youtu.be/7WrpbhAj9o8

DOWNLOADS

[Image Pack \(ZIP\)](#)

[doc-force-10-typhoon-full-face-mask.pdf \(PDF\)](#)



JSP Limited. Worsham Mill. Minster Lovell. Oxford OX29 0TA. England.

Tel: +44 (0)1993 826050 / Fax: +44 (0)1993 824411 / Email: sales@jgpsafety.com / Web: www.jgpsafety.com

Do Not Publish without written permission from JSP Limited. Contact copyright@jgpsafety.com. Information correct in the United Kingdom at date of issue and may be subject to change. Any third-party machine and automated translations processed by users may have inaccuracies and should not be relied upon.

Page 3 of 3 / Issued 30 May 2024 / Copyright 2018 - 2024. JSP Limited. All Rights Reserved.

