


Air Quality Guardian

Instruction Manual



ANALOX

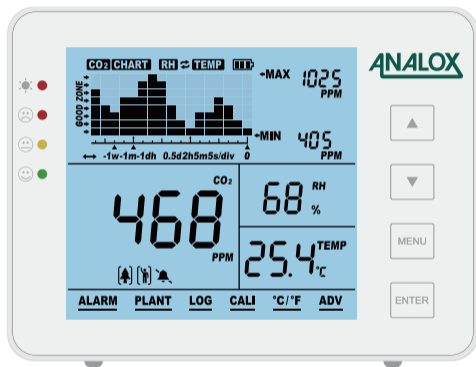

Contents

| | |
|--------------------------------|----|
| Getting Started | 1 |
| Packing List | 1 |
| Features at a Glance | 1 |
| Overview | 2 |
| General Operation and Settings | 3 |
| Restore Factory Defaults | 3 |
| Switch On/Off | 4 |
| Power Source | 5 |
| LCD Display | 6 |
| Trend Chart Display | 7 |
| Max/Min | 8 |
| Main Menu Functions | 9 |
| RH/TEMP Calibration | 14 |
| Specifications | 15 |
| Appendix | 17 |

Getting Started

Thanks for purchasing our desktop CO₂ monitor! This product is used to monitor CO₂ concentration, RH, and temperature for indoor air quality monitoring.

Packing List


CO₂ Monitor Unit
USB Cable for Power
User's Manual

Features at a Glance

- Large Display
- Touch Button Operation
- Monitor set at a 15° angle for ease of reading
- Low Drift NDIR Sensor, Long Lifespan
- Audible Alarm
- Chart with Variable Time Zoom Levels
- CO₂/RH/Temperature Monitor Tracer
- CO₂ Auto-Calibration and Manual Calibration
- Temp and RH Manual Calibration
- Max/Min Value Display
- Built-in Backup Battery

Overview



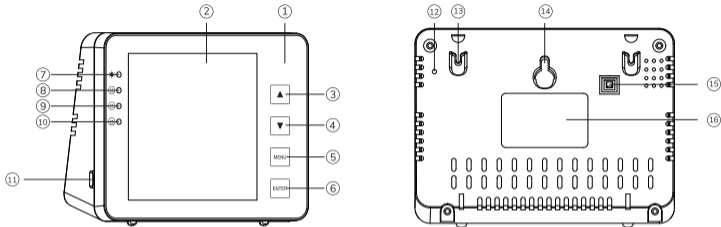








Drawing and Components List



| Item | Description | Item | Description |
|------|-------------------------|------|----------------------------|
| ① | Front Panel | ⑨ | Orange Condition Indicator |
| ② | LCD | ⑩ | Green Condition Indicator |
| ③ | UP Button | ⑪ | USB Port |
| ④ | Down Button | ⑫ | Hole for Buzzer |
| ⑤ | Menu Button | ⑬ | Hole for Rope |
| ⑥ | Enter/OK Button | ⑭ | Hole for Screws |
| ⑦ | Battery Indicator | ⑮ | ON/OFF Switch |
| ⑧ | Red Condition Indicator | ⑯ | Label |

General Operation and Settings

Charge the Air Quality Guardian prior to first use, see page 5 for details.


- Press down the switch on the back to activate this monitor. After 3 minutes' warm-up, your device is ready for use. See details in Page 4.
- Use the provided USB cable to connect the device for charging. See Page 5 for details.
- Use  and  buttons to switch timeline and CO₂/RH/TEMP. The trend chart displays the history records for any of the three parameters. See Page 7 for details.
- Touch  once will bring up the main menu. To select the function, touch  /  button. See Page 9 for details.
- Select **PLANT** to switch human  and plants  modes. See Page 10 for details.
- Enter **ALARM** to switch alarm  and mute  . See Page 10 for details.
- Select **ADV** to change the high/low alarms for human  and plant  . See Page 13 for details.
- Enter **C/F** to switch temperature units C and F. See Page 12 for details.

Restore Factory Defaults

In Detection Panel , touch  for 4 seconds until an audible beep is heard.

Switch On/Off


Press down the switch to activate this monitor, wait for 3 minutes for warm-up.
Press the switch again to switch it off.

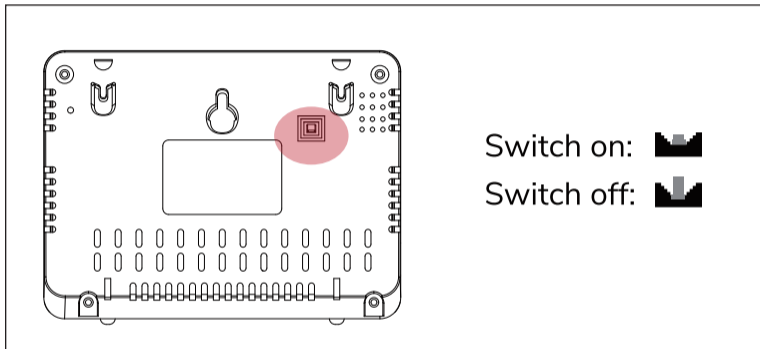

Power Source

Plug in USB power

When the device is ON, plug in USB power cable

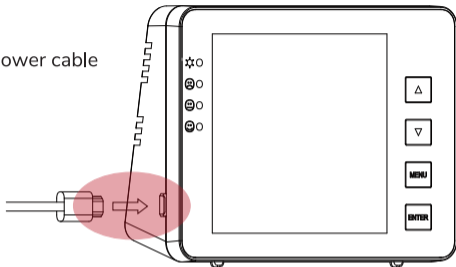

Battery

Battery indicator

Low battery: steady red indicator (Charge the device within 20 minutes to avoid battery damage)

Charging: flashing red indicator

Fully charged: steady green indicator


Battery recharging

When the device is ON, plug in USB power cable

Charging time: 2.5 hours (Charge extra 30 minutes after the indicator turning from red to green)

Working time: 8-10 hours



LCD Display

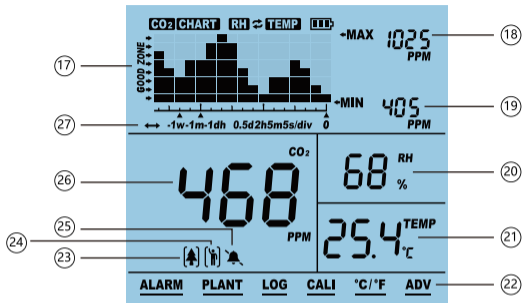


| Item | Name | Item | Name |
|------|--------------------------------|------|--------------------------------------------------------|
| ①7 | CO ₂ /RH/TEMP Chart | ②3 | Plant Mode |
| ①8 | Max Reading of Chart | ②4 | Human Mode |
| ①9 | Min Reading of Chart | ②5 | Audible Alarm On/Off |
| ②0 | RH Reading | ②6 | CO ₂ Reading |
| ②1 | Temperature Reading °C / °F | ②7 | Time per Division - indicates the chart's span of time |
| ②2 | Main Menu | | |

Trend Chart Display

The below chart displays the past readings for any of the three parameters (CO₂/RH /Temp). There are 4 modes that can be toggled by using key: CO₂, TEMP, RH, and Cycle (automatically cycles through CO₂/Temp/RH).

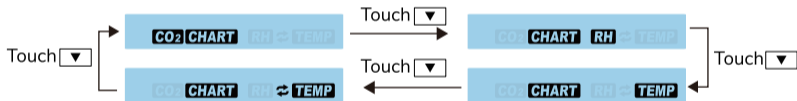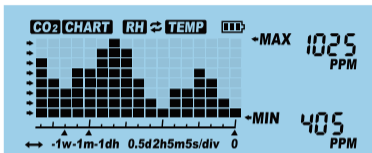

Touch will toggle the available Zoom Levels for each parameters. (Minute/Hour/Day/Week)

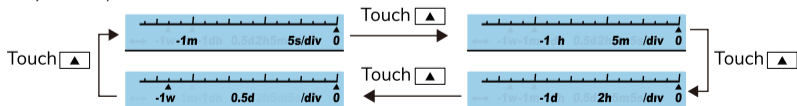

Below is a table that shows the available Zoom Levels for all parameters CO₂/RH/Temp, as well as the duration of each division for corresponding Zoom Levels:

| Zoom Level (Time Span) | Time per Division |
|------------------------|-------------------|
| 1M (minute) | 5sec/div |
| 1H (hour) | 5m/div |
| 1D (day) | 2h/div |
| 1W (week) | 0.5d/div |


Max/Min

At the top right corner of the display, there are two numerical indicators: MAX and MIN. As the Zoom Level is changed, the MAX and MIN values will reflect the maximum and minimum values on the chart of the selected parameter (CO₂, RH and Temp).







Main Menu Functions

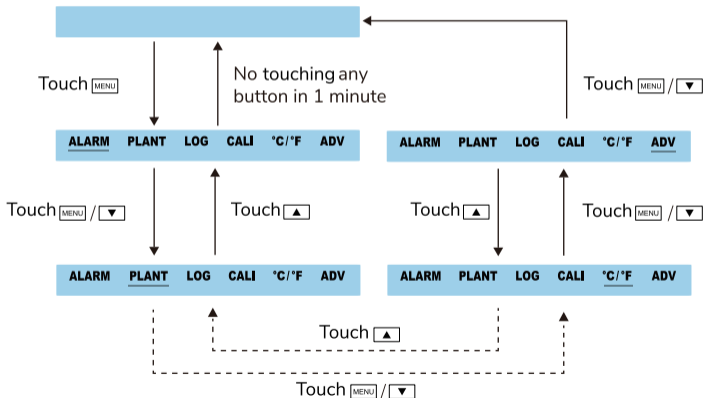



The Main Menu functions can be accessed by touching . The arrows can be used to scroll through menu options.

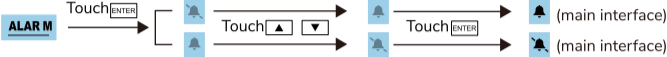

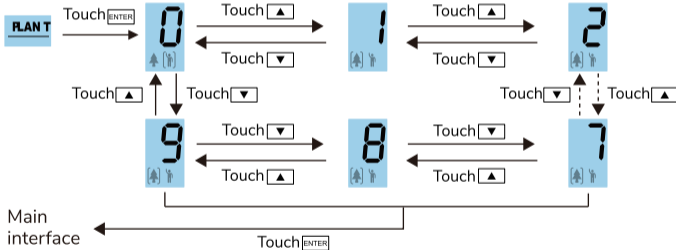To select the function, touch **ENTER** when it is underlined by the flashing bar. Note that after 30 seconds if nothing is touched, the Main Menu will disappear and the device will revert to the normal state.

| Function | Description |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ALARM |  <p>When ALARM displays , an audible alarm will sound if the CO₂ level exceeds preset CO₂ alarm value;  means MUTE.</p> |
| PLANT |  <p>Select number 0 to enter human mode. The preset low and high alarm are 800 and 1200ppm. Enter "ADV" to adjust them if necessary. In plant mode, it allows user to select between types of plants for optimal setting by using   cycles through 1~9. See number references with corresponding alarm settings in high and low alarms in Page 17.</p> |

| Function | Description |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LOG | <p>LOG</p> <p>Touch <input type="button" value="ENTER"/></p> <p>CO₂ CHART <input type="button" value="100"/> <input type="button" value="1000"/> <input type="button" value="10000"/></p> <p>GOOD ZONE</p> <p>-1m 5s/div 0</p> <p>Touch <input type="button" value="▼"/></p> <p>-1 h 5m /div 0</p> <p>Touch <input type="button" value="▼"/></p> <p>-1d 2h /div 0</p> <p>Touch <input type="button" value="▼"/></p> <p>-1w 0.5d /div 0</p> <p>Touch <input type="button" value="▼"/></p> <p>Touch <input style="border: 1px solid black; padding: 2px; margin-left: 10px;" type="button" value="▲"/> , right 2nd column flashes</p> <p>Touch <input style="border: 1px solid black; padding: 2px; margin-left: 10px;" type="button" value="▲"/> , right 2nd,3rd... column flashes</p> |
| | This function allows the user to see historical data records. |

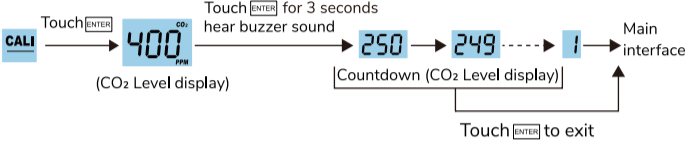
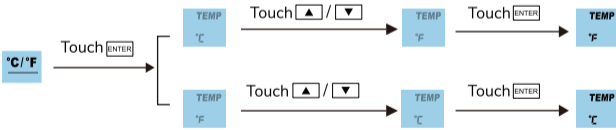
| Function | Description |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CALI |  <p>Before calibration, run this device for at least 20 minutes with windows open or in outdoor environment with portable battery source to reach an atmosphere with 400ppm CO₂. Wait till the CO₂ reading is stable, follow above steps for calibration. After calibration leave it 10 minutes before normal use.</p> |
| °C / °F |  <p>Use this function to toggle between Celsius (°C) and Fahrenheit (°F) for the temperature display.</p> |

| Function | Description |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ADV | <p style="text-align: center;">Touch <input type="button" value="ENTER"/></p> <p style="text-align: center;">Touch <input type="button" value="ENTER"/></p> |
| | <p>Use this function to set high and low alarm values of human mode (0) as well as the first option of plant mode (1). High and low alarms for options 2-9 under plant mode are not adjustable. See details in Page 14. (Appendix)</p> |

RH/TEMP Calibration

This function allows the user to calibrate the temperature or humidity manually.
(RH = Humidity; TEMP = Temperature)

In the detection mode, touch and hold **MENU** for 3 seconds to bring up an underlining flashing bar of RH.
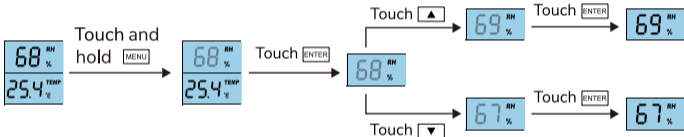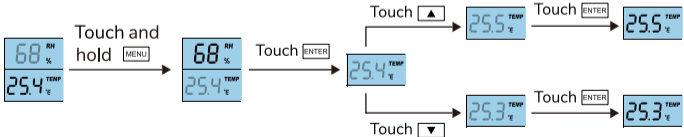
| Function | Description |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RH |  <p>The RH calibration process starts with a display showing 68% RH and 25.4% TEMP. A 'Touch and hold MENU' action leads to a display with a flashing bar under the RH value. A 'Touch ENTER' action then leads to a display with the flashing bar under the TEMP value. From this state, two paths are possible: <ul style="list-style-type: none"> Touching the up arrow (▲) leads to a display showing 69% RH. Touching the down arrow (▼) leads to a display showing 67% RH. In both cases, a 'Touch ENTER' action leads to the final calibrated RH value (69% or 67%) displayed on the screen.</p> |
| TEMP |  <p>The TEMP calibration process starts with a display showing 68% RH and 25.4% TEMP. A 'Touch and hold MENU' action leads to a display with a flashing bar under the RH value. A 'Touch ENTER' action then leads to a display with the flashing bar under the TEMP value. From this state, two paths are possible: <ul style="list-style-type: none"> Touching the up arrow (▲) leads to a display showing 25.5% TEMP. Touching the down arrow (▼) leads to a display showing 25.3% TEMP. In both cases, a 'Touch ENTER' action leads to the final calibrated TEMP value (25.5% or 25.3%) displayed on the screen.</p> |

Specifications

Typical test conditions: Ambient Temp: 23 ±3°C, RH = 50%~70%, Altitude = 0~10 meters

| Measurement | Specifications |
|-----------------------------------|----------------------------------------------------------------|
| Operating Temperature | 32°F ~ 122°F (0°C ~ 50°C) |
| Storage Temperature | -4°F ~ 140°F (-20°C ~ 60°C) |
| Operating & storage RH | 0-95%(non-condensing) |
| CO₂ Measurement | |
| Measuring range | (0-5000)ppm |
| Display resolution | 1ppm (0-1000); 5ppm (1000-2000); 10ppm (>2000) |
| Accuracy | (0~3000)ppm: ± 50ppm ± 5% of reading (take the Maximum) |
| | (>3000)ppm: ± 7% of reading |
| Repeatability | 20ppm at 400ppm |
| Temp compensation | ±0.1% of reading per °C ±2 ppm per °C, referenced to 25°C |
| Response time | <2 min for 63% of step change or < 4.6 min for 90% step change |
| Warm-up time | <20 seconds |

| Temperature Measurement | |
|--------------------------------|-----------------------------------------------|
| Operating temperature | 32°F ~ 195°F (0°C ~90°C) |
| Display resolution | 1°F / 0.1°C |
| Response time | <20 minutes (63%) |
| RH Measurement | |
| Measuring range | 5~95% |
| Accuracy | ±5% |
| Display resolution | 1% Main interface display, 1% Max/Min display |
| | |
| Operating Voltage | 5VDC (±0.25V) |
| Dimension | 120*90*35mm (4.75*3.5*1.4inches) |
| Weight | 190g (6.70oz) |

Appendix

| No. | Refers | Low/High Alarm | Adjustable |
|-----|----------------------|----------------|------------|
| 0 | FOR Human | 800-1200ppm | Yes |
| 1 | FOR Customized Plant | 600-900ppm | Yes |
| 2 | FOR Bean | 600-900ppm | No |
| 3 | FOR Chillies | 800-1000ppm | No |
| 4 | FOR Cucumber | 1000-1500ppm | No |
| 5 | FOR Grape | 800-1400ppm | No |
| 6 | FOR Orchid | 800-1400ppm | No |
| 7 | FOR Potato | 1200-1800ppm | No |
| 8 | FOR Strawberry | 800-1200ppm | No |
| 9 | FOR Tomato | 800-1200ppm | No |

